

# discgear *selector* 100

**CD3 Storage Systems, Inc.**

301 Hester's Crossing Road, Suite 202  
Round Rock, TX 78681

512-238-1336  
800-388-7597


[www.discgear.com](http://www.discgear.com)

Instructions

Thank you for purchasing a Discgear® Selector 100. Please take time to get to know your Selector by following these simple instructions. They will help you fill your Selector 100 with your favorite discs.

## Know your Selector 100

- 1 Transport handles
- 2 Title sheet access bar
- 3 Disc selector bar (Opens unit)
- 4 Self-aligning slots (To insert disc simply roll it into the numbered slot.)
- 5 Selector button (To select a disc, push down and slide the selector button to the appropriate numbered slot.)
- 6 Lock position (To lock the unit, slide the selector button to the center position indicated by the padlock.)
- 7 Title sheet (To access the title sheet, press the title sheet access bar.)
- 8 Title sheet tray
- 9 Disc numbering ID dots (Enclosed ID dots correspond to the numbers on the disc storage slots and title sheet.)

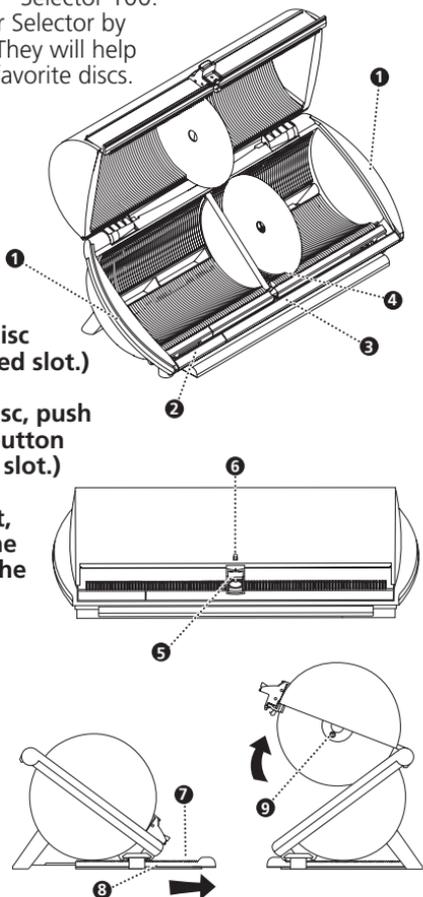

## Selector 100 Instructions

- Access your title sheet.** Press the title sheet access bar and the title sheet tray will automatically appear so that you may view your title sheet.
- Catalog your discs.** Choose one of these methods:
  - 1) Visit [www.discgear.com](http://www.discgear.com) to access our new **Discware™** software for cataloging and organizing your discs. If you do not have Internet access, call 1-800-388-7597 and we'll send you the CD-ROM (\$4.95 S&H charge applicable).
  - 2) Remove title sheet from the plastic sleeves located in the title sheet tray. Write your CD titles directly on the title sheet.
- Number your discs.** Locate the ID dot (Example: A1, B1, C1...) and place it on the clear center ring on the front of the disc.
- Fill your Selector.** As you number each disc, place it in the corresponding storage slot number.
- Select your discs.** Slide the selector button to the appropriate numbered slot. Then press the disc selector bar and your Selector 100 automatically opens presenting your disc to you.
- Replace your discs.** Refer to the ID dot on your disc, find the appropriate "self-aligning slot" and simply roll it into place.
- Carry your Selector.** IMPORTANT - Move the selector button to the center lock position indicated by the padlock. With your Selector 100 locked you may now carry your Selector by using the side transport handles.