



Discgear® Products Full Lifetime Warranty

All Discgear® CD Storage Units are unquestionably guaranteed against mechanical failure, regardless of age. Any Discgear® product or part requiring service will be repaired or replaced at no charge when received at our factory from the consumer (postage and postal insurance are the responsibility of the consumer). Any product that is no longer in production and cannot be repaired will be replaced with a comparable Discgear® product. Marker pens, title sheets and other items exhausted in the course of normal use, and emblems and other customized decoration, are excluded from this warranty. The Discgear® Guarantee extends our assurance of a lifetime of CD Storage pleasure to every owner of a Discgear® CD Storage Unit.

This warranty gives you specific legal rights, and you may have other rights that vary from state to state or jurisdiction to jurisdiction.

CD3 INTL LTD'S MAXIMUM LIABILITY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID BY YOU FOR THE CD3 PRODUCT. IN NO EVENT SHALL CD3 INTL LTD BE LIABLE FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES.

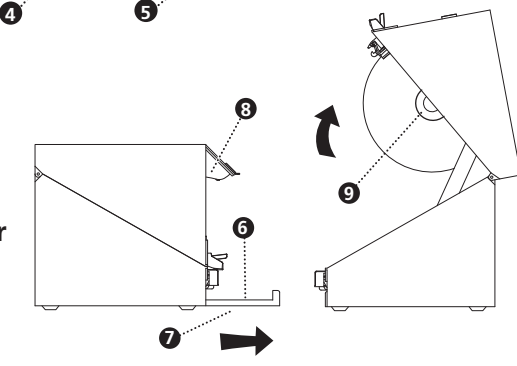 
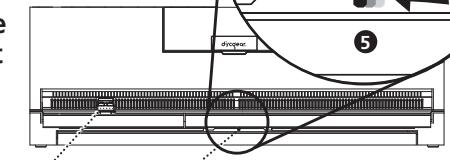 
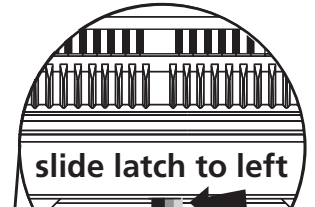 
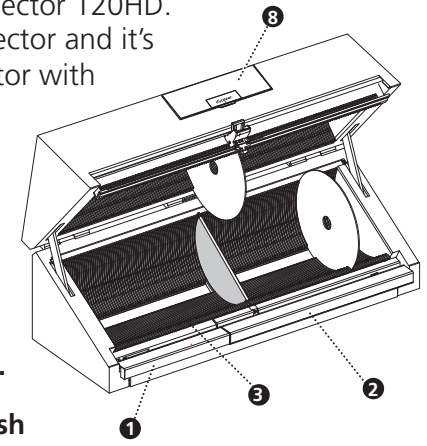 
@2012 CD3 INTL LTD All rights reserved. Discgear and CD3 are registered trademarks of CD3 INTL LTD


Contact us: **CD3 International Ltd**
Flat C, 3/F, Wang Kwong Ind Bldg,
45 Hung To Road, Kwun Tong,
Kowloon, Hong Kong.

Thank you for purchasing a Discgear® Selector 120HD. Please take time to get to know your Selector and it's many great benefits. Then fill your Selector with your favorite discs.



Know your Selector 120HD

- 1 Title sheet access bar
- 2 Disc selector bar ▲ - Opens unit
- 3 Self-aligning slots - To insert disc simply roll it into the numbered slot.
- 4 Selector button - To select a disc, push down and slide the selector button to the disc number of your choice.
- 5 Hidden lock - The hidden latch is located under the disc selector bar, close to the center. To lock the Selector, push the hidden latch and slide to the left.
- 6 Title sheet - To access the title sheet, press on the title sheet access bar.
- 7 Title sheet tray
- 8 LED Light - Lights up the title sheet in dark rooms. Automatically comes on when lifted to 45° position. It turns off when closed.
- 9 Disc numbering - Use a permanent marker to number each disc so the storage slots and the title sheet match. Now you can easily return each disc to its number slot.

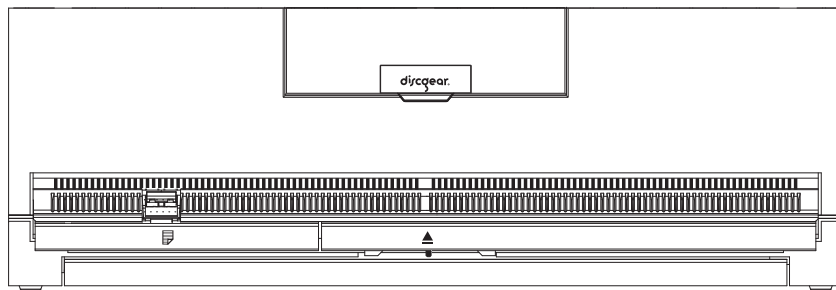 




Selector 120HD Instructions

1. **Access your title sheet.** Press on the title sheet access bar  and the title sheet tray will automatically appear so that you may view your title sheet and make your selection.
2. **Catalog your discs.** Choose one of these methods:
 - a) Visit **www.mydiscgear.com** to access our free online service for cataloging and organizing your discs, and printing title sheets.
 - b) Remove the title sheet from the plastic sleeves located in the title sheet tray. Write your CD titles directly on the title sheet.
 - c) Use the included Literature Album to catalog your disc's corresponding literature or liner notes.
3. **Number your discs.** Use a permanent marker to reference your disc's slot number. Use an alpha-numeric system so that you can organize multiple Selectors (Ex. A1, B1, C1...) *We recommend that you only write on the clear center ring on the front of the disc.*
4. **Fill your Selector.** As you number each disc, place it in the corresponding storage slot number.
5. **Select your discs.** Slide the selector button to the appropriate numbered slot. Then press the disc selector bar  and your Selector automatically opens presenting your selected disc.
6. **Replace your discs.** Refer to the number on your disc, find the appropriate "self-aligning slot" and simply roll it into place.

7. **Battery installation.** Lift the light panel past the 45° position to access the battery. Insert one "AAA" alkaline battery. Nominal battery voltage, 1.5 V AAA battery. *We recommend using alkaline batteries for longer battery life.*



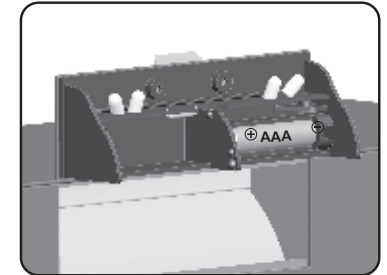 Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).



Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product.

To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated on the battery compartment door.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Mydiscgear.com

Free Online Disc Organizing Software

Visit **www.mydiscgear.com** to access our unique online organizing software that allows you to print your disc index in the order you choose. At MyDiscgear.com, you can organize multiple Discgear units and keep track of your entire disc collection.

Discgear® Literature Album Instructions

- Place CD or DVD literature into sleeves.
- Use the included ID dots to label the clear cover of the sleeve where your literature is stored.
- Match the number on your disc or title sheet to the sleeve with the corresponding literature.
- Use the enclosed title sheet index to label all titles for quick reference.

