


Thank you for purchasing a Discgear® Selector 50FX / 100FX. Please take time to get to know your Selector by following these simple instructions. They will help you fill your Selector with your favorite discs.

Know your Selector FX

- 1 Transport handles
- 2 Disc selector bar ▲ (Opens unit)
- 3 Self-aligning slots (To insert disc simply roll it into the numbered slot.)
- 4 Selector button (To select a disc, push down and slide the selector button to the appropriate numbered slot.)
- 5 Lock position (To lock the unit, slide the selector button to the center position indicated by the padlock.)
- 6 Title sheet (To access the title sheet, lift up the clear top cover)
- 7 Disc numbering - Use a permanent marker to number each disc so the storage slots and the title sheet match.

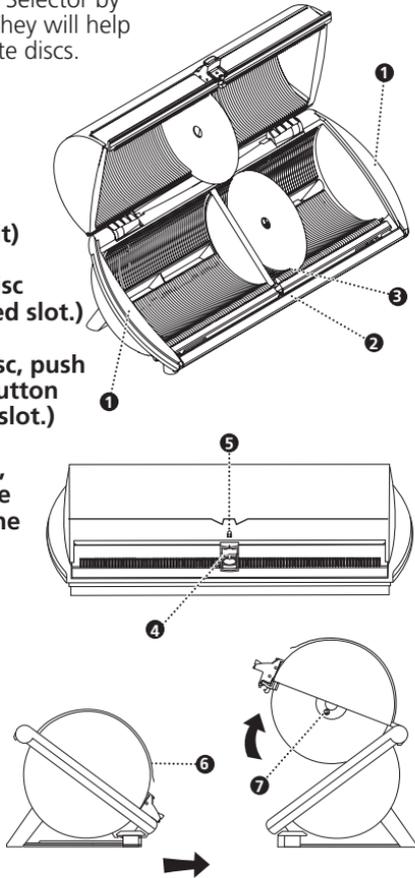

Selector FX Instructions

- Access your title sheet.** Lift up the clear top cover to view the title sheet index. Customize your look with our interchangeable title sheet designs, available online (See B1).
- Catalog your discs.** Choose one of these methods:
 - 1) Visit www.discgear.com to access **Discware™ Online**, our new online service for cataloging and organizing your discs, and printing title sheets. Choose from many designs to customize your look.
 - 2) Remove title sheet from the clear cover located on the top of your Selector FX. Write your CD titles directly on the title sheet.
- Number your discs.** Use a permanent ink marker to reference your disc's slot number. Use an alpha-numeric system so that you can organize multiple Selectors (Ex. A1, B1, C1...) We recommend that you only write on the clear center ring on the front of the disc.
- Fill your Selector.** As you number each disc, place it in the corresponding storage slot number.
- Select your discs.** Slide the selector button to the appropriate numbered slot. Then press ▲ on the disc selector bar and your Selector automatically opens presenting your disc to you.
- Replace your discs.** Refer to the ID number on your disc, find the appropriate "self-aligning slot" and simply roll it into place.
- Carry your Selector.** IMPORTANT - Move the selector button to the center lock position indicated by the padlock. With your Selector locked you may now carry it by using the side transport handles.

Discgear® Products Limited Warranty

What is covered: All parts defective in material and workmanship.

For how long: 90 days from the purchase date.

What we will do: We will, at our sole discretion, repair or replace any defective parts free of charge.

What we will not do: Pay shipping or transportation from you to us or from us to you.

Other conditions:

The provisions of this warranty are in lieu of any other warranty, whether express or implied, written or oral, including any warranty of merchantability or fitness for a particular purpose. CD3's maximum liability shall not exceed the actual purchase price paid by you for the product. In no event shall CD3 be liable for special, incidental, consequential.

What you must do:

- A. Contact us at <http://www.discgear.com/warranty.php> for return and shipping instructions.
- B. Provide us proof of purchase.
- C. Label and ship at your cost to the address provided by us.
- D. Pay shipping cost from us to you.

©2014 CD3 INTL LTD All rights reserved. Discgear and CD3 are registered trademarks of CD3 INTL LTD.

Made in China

Contact us: **CD3 International Ltd**
Flat C, 3/F, Wang Kwong Ind Bldg,
45 Hung To Road, Kwun Tong,
Kowloon, Hong Kong.



Instructions for
Selector 50FX and
Selector 100FX models